

GV600EU, N, FEW

**DE Kodieranweisung**

**1. Aufruf**

- Bei geschlossener Tür Drehschalter (S0) in Position "5" stellen.
- Hauptschalter drücken und für mindestens 3 sek. gedrückt halten.
- Solange der Hauptschalter gedrückt bleibt wird die aktuelle Variantenkodierung angezeigt.
- Innerhalb 5 sek. Drehschalter (S0) im Uhrzeigersinn drehen bis im Display „P4“ angezeigt wird.
- Nach 5 sek. in dieser Position ist die Variantenkodierung aktiviert.

**2. Variante einstellen**

- Drehschalter solange drehen bis die richtige Variante (siehe Tabelle) im Display angezeigt wird.
- Hauptschalter ausschalten und die Einstellung ist gespeichert.

**EN Coding instruction**


**1. Selecting the model coding**

- When the door is closed, turn the rotary switch (S0) to position "5".
- Press main switch and hold down for at least 3 sec.
- The current model coding is displayed via Display for as long as the main switch is held down.
- Within 5 sec. turn the rotary switch (S0) clockwise until Programm P4 comes on.
- After 5 sec. The model coding is activated in this position.

**2. Selecting the model**

- Turn the rotary switch until the correct model (see table) is displayed via Display.
- Switch off the main switch, setting is saved.

	DE	EN
	Intensiv	intensiv
	Stark	intensiv
	Normal	normal
	ECO	eco
	Sanft	gentle
	Schnell	quick
	Vorspülen	prerinse
	Zeitverkürzen	time reduction
	Zeitvorwahl	timer programming
	Oberkorb	top basket
	Unterkorb	bottom basket
	Einweichen	soak
<b>A</b>	Auto	auto
<b>R</b>	Reset	reset
	Variospeed	vario-speed
	Halbe Beladung	half-load
	Teller wärmen	dishes warm-up

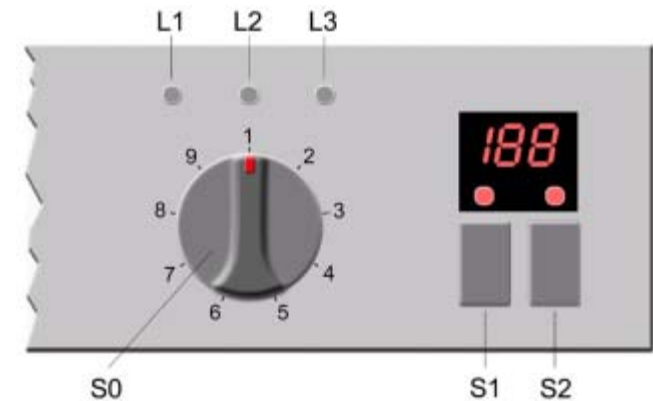

Code	Taste/Button		Position						
	S1	S2	7	8	9	1	2	3	4
C1									
C2									
C3									
C4									
C5									
C6									
C7									
C8									